

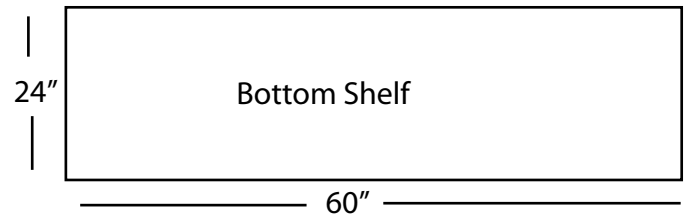
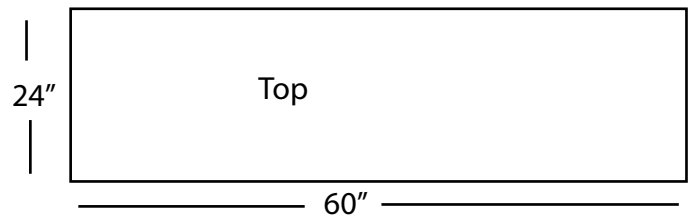


First measure the front width of your TV. Then the depth. Then cut or have your hardware store cut two boards the same size.

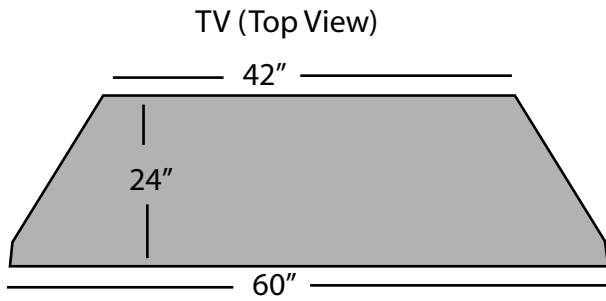


Since the width (in this example) is 42", First find the center of the back width and mark it. Then measure 21" away from the center and mark it. Then draw a cut line from the front corner to this mark.

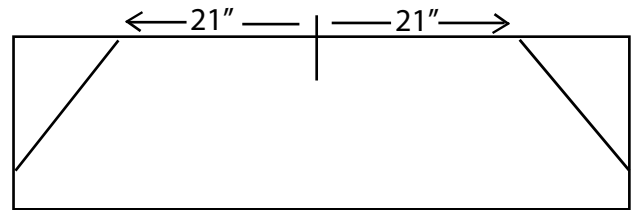

Cut 4 equal 4X4 pieces as high as you want. Lets say 16".


Place the 4x4 on each corner and draw around them. Draw a cut line from the front corner to the back outer mark (21" away from center). Do this to both pieces.

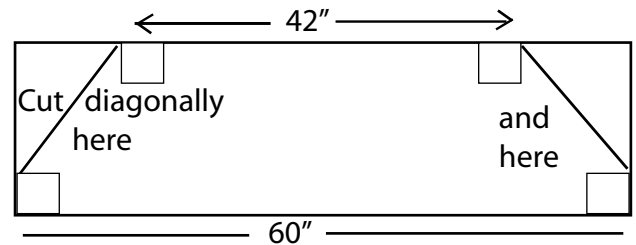

At this point the Top piece is done.



Now cut around the 4X4 drawing. Only for the bottom shelf.

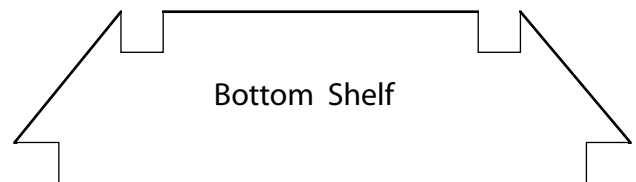

Now put each 4X4 under each corder the Top shelf and screw it or nail 4 nails in it.



Then finally cut 4 little 4x2 pieces as pegs and screw them or nail them on the 4X4 for the Botoom shelf to rest on

